## **SOP (GENERATOR)**

SS-WHS-SAF-000

Authorised By: Rev 1 19/03/2024



TASK	Generator					
HAZARDS	Flying debris		Heat / cold		Electricity	$\boxtimes$
	Cuts / laceration	$\boxtimes$	Dust		Rollover	
	Pinch / crush	$\boxtimes$	Noise / vibration	$\boxtimes$	Plant interaction	
	High pressure		Fire	$\boxtimes$	Exhaust	$\boxtimes$
PPE REQUIRED						

## **PRE-START CHECKS**

- 1. Ensure all personnel are trained and authorized to operate the generator.
- 2. Inspect the generator for any visible damage, leaks, or signs of wear.
- 3. Check that all fuel and oil levels are adequate for operation.
- 4. Verify that the battery is fully charged and that all electrical connections are secure.
- 5. Confirm that fire extinguishing equipment is readily available in case of emergency.

## SAFE OPERATING PROCEDURE

- 1. Wear appropriate personal protective equipment (PPE) including safety glasses, gloves, and appropriate footwear.
- 2. Start up the generator according to manufacturer's instructions, ensuring that all safety interlocks are engaged.
- 3. Monitor the generator operation closely, checking for any abnormalities such as unusual noises or fluctuations in voltage or frequency.
- 4. Adjust generator controls as necessary to maintain proper operating conditions.
- 5. Be aware of any leaks, spills, or exhaust emissions around the generator area and take appropriate action to contain and clean them up.
- 6. If any issues or errors occur during operation, shut down the generator immediately and troubleshoot the problem before resuming.
- 7. After operation is complete, shut down the generator and perform any necessary maintenance or refueling tasks.

## **POST-OPERATION PROCEDURE**

- 1. Perform a visual inspection of the generator for any damage or signs of wear, reporting any issues to the appropriate personnel.
- 2. Clean the generator and surrounding area to remove any dirt, debris, or spilled fluids
- 3. Check fuel and oil levels and refill or adjust as necessary.
- 4. Store any unused fuel or chemicals in a designated area away from the generator.

SS-WHS-SAF-000 SOP (GENERATOR) (Rev 1 19/03/2024) Page 1 of 1